

### 3.4 Hinges

#### Door adjustment :

- unscrew the M5 screw **n°1** on the bottom hinge
- screw the pin **(2)** with a BTR key (size 8mm)

